Installation instruction

ARAT Special mount for Navigation Systems

Artikel-Nr.: NS 1260
for BMW, 3 series E46 + 5 series E39
1998 2003

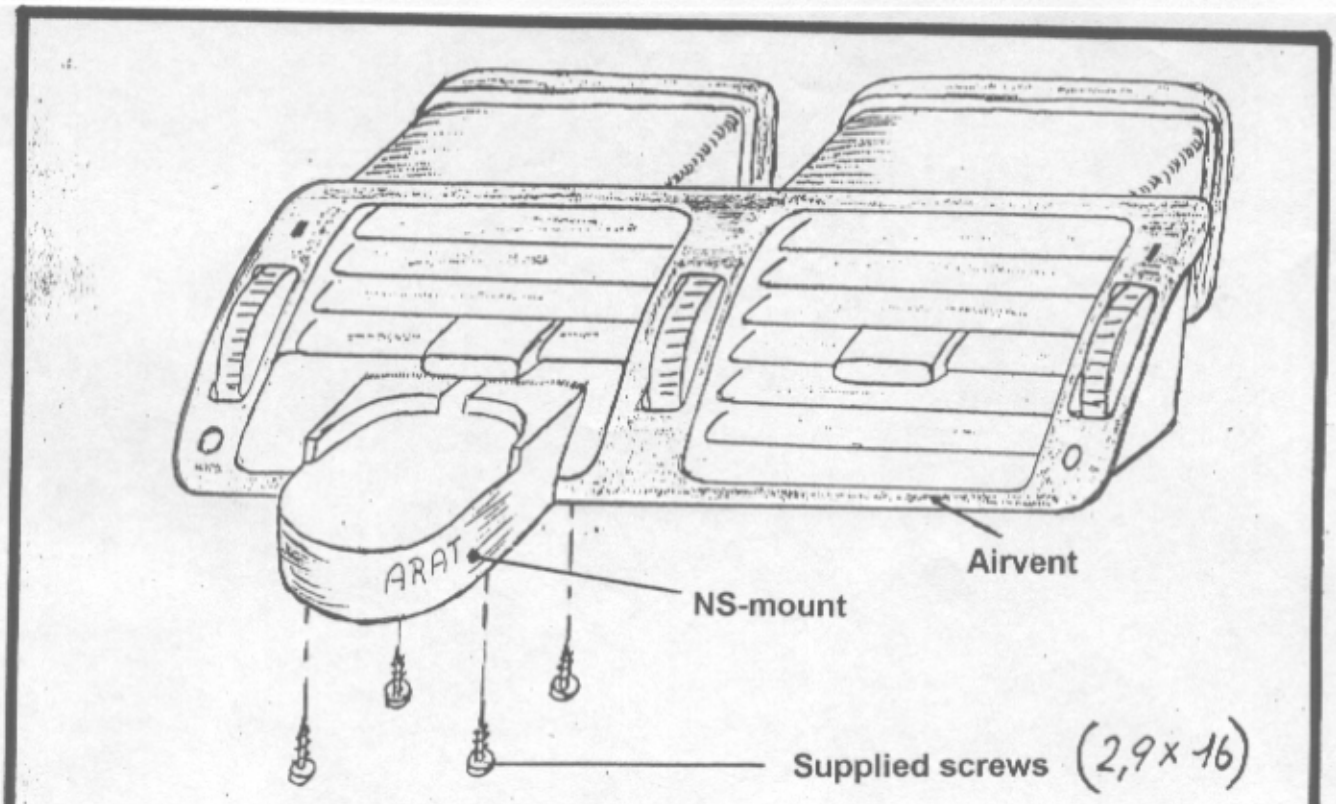

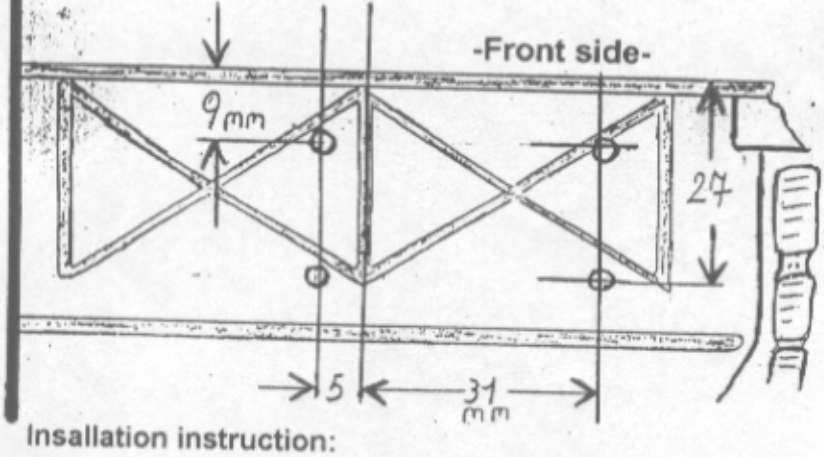

Airvent assembly view from beneath

-Dimensions for the securing holes for supplied screws-

Insallation instruction:

1. Remove the airvent assemble from the dashboard by pulling it out (it is only a push fit) and remove the cable assembly
2. Remove the bottom two airvent vanes by removing first the left hand side and taking the vanes out
3. Drill the holes from below, in the airvent assembly (as per the dimensions in the drawing)
4. Secure the mount with the screws provided, in the bottom of the airvent assembly
5. Replace the airvent assembly

ARAT GmbH-Hauptstrasse-33758 Stukenbrock, Germany Tel: (+49) 5207-8952-52 Fax. (+49) 5207-8952-68
E-mail. info@arat.de Website. www.arat.de